


**PUNTE COMPONENTI PER FORI CIECHI IN HW INTEGRALE**

*HW Jobber drill bits*

*VHM Vollhartmetall Spiralbohrer*

*Broca MD integral*

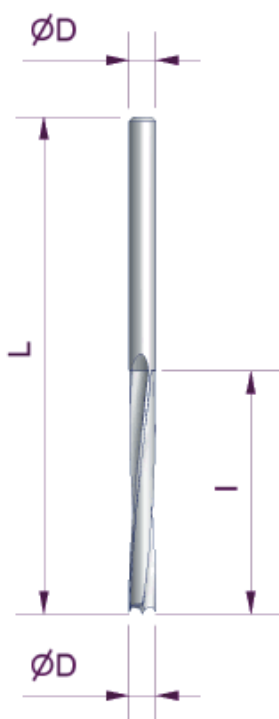

<b>Ø D</b>	<b>L</b>	<b>DX - RH</b>	<b>SX - LH</b>
2	49	FC.W.49/2.D	FC.W.49/2.S
2.5	55	FC.W.55/25.D	FC.W.55/25.S
3	55	FC.W.55/3.D	FC.W.55/3.S
3.2	55	FC.W.55/32.D	FC.W.55/32.S
3.5	55	FC.W.55/35.D	FC.W.55/35.S
4	55	FC.W.55/4.D	FC.W.55/4.S
5	55	FC.W.55/5.D	FC.W.55/5.S