


## PUNTE SPECIALI PER FORI CIECHI IN HW


*HW Special dowell drill bits*

*HW Spezialdübelbohrer*

*HW broca para agujero ciego*

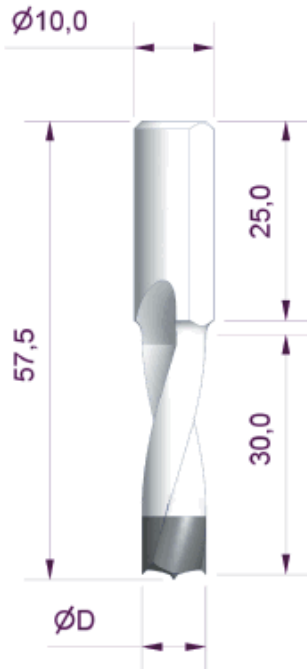

Ø D	L	DX - RH	SX - LH
5	57.5	FC.SB.HP.57/5.D	FC.SB.HP.57/5.S
6	57.5	FC.SB.HP.57/6.D	FC.SB.HP.57/6.S
8	57.5	FC.SB.HP.57/8.D	FC.SB.HP.57/8.S
10	57.5	FC.SB.HP.57/10.D	FC.SB.HP.57/10.S
12	57.5	FC.SB.HP.57/12.D	FC.SB.HP.57/12.S

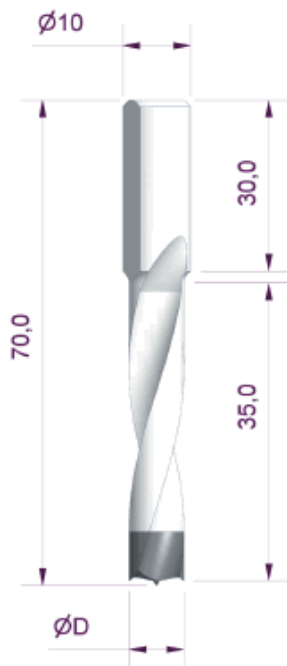

Ø D	L	DX - RH	SX - LH
5	70	FC.SB.HP.70/5.D	FC.SB.HP.70/5.S
6	70	FC.SB.HP.70/6.D	FC.SB.HP.70/6.S
8	70	FC.SB.HP.70/8.D	FC.SB.HP.70/8.S
10	70	FC.SB.HP.70/10.D	FC.SB.HP.70/10.S
12	70	FC.SB.HP.70/12.D	FC.SB.HP.70/12.S